




MMF POS Heritage™ 15” Quick Installation Instructions



Chassis Color: Black or Putty
Front Panel: Stainless Steel
Till: US 5 Bills / 5 Coins

Models:
226-113151312-04 (Black)
226-113151312-89 (Putty)

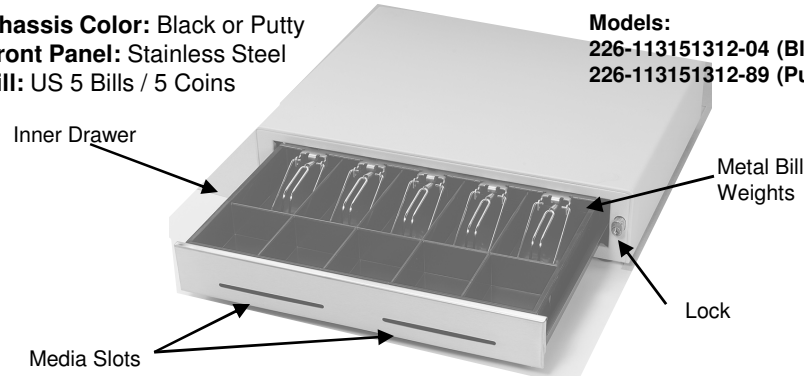

NOTE: For a list of additional accessories and/or replacement parts, contact your supplier or visit our website at <http://www.mmfpos.com>


Placement of Cash Drawer

- Prepare a location for the cash drawer by selecting a secured, leveled surface that is no smaller than the cash drawer.
- Operating temperature should be controlled at 20° F to 100° F (-7° C to 37° C)
- Position the cash drawer and remove any packing tape or guards from the tray.
- It is recommended to anchor the cash drawer to counter surface or if mounting under counter at all times to prevent any injuries if cash drawer is over loaded.

2 function Plunger Lock Functionality:

- 12 o'clock position – Drawer is Locked & Electronically ON
- 2 o'clock position & Push IN – Manually Unlock Drawer

To avoid the possibility of losing, damaging, or breaking the key from the lock during transactions, please place lock in the 12 o'clock position and **remove** key.

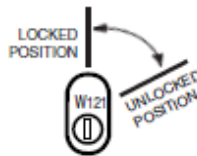

Printer-Driven Interface Connection

(Epson/Star Printer Kwick-Kable (P/N:226-199EPST1000) INCLUDED)

- If your printer does not support Epson/Star emulation wiring, please contact your dealer or MMF POS to purchase proper printer cable.
- Connect one side of the corresponding printer-specific MMF RJ-12 Cable to the interface connection located under the cash drawer. The end of the cable that has a label with the MMF cable part number will plug into the Cash Drawer and the end that has a label that reads: "Connect to Printer" would plug into the receipt printer.
- Follow the set-up instructions from the printer manufacturer to properly connect the cash drawer to the receipt printer.

Preventive Maintenance:

- Lubricate the slides and latch mechanism periodically. Inspection and lubrication will vary based on operating conditions.
- Remove any debris from slides, if present.
- A thin film of lithium-based grease or a few drops of general purpose oil should be maintained on the ball bearing tracks of the slides

Troubleshooting:

Cash Drawer does not open electronically

- Consult the documentation or manuals for your particular printer for the proper open codes.
- Verify the correct end of the RJ-12 printer cable is connected to the cash drawer as well as the printer.
- Verify correct position of the lock. To open electronically the lock would need to be in the 12 o'clock position.

Cash Drawer does not open manually or electronically

- Make sure all packing tapes were removed from the cash tray and that no foreign objects are obstructing the cash tray from opening.

Warnings/Safety Instructions:

- Avoid breaking coin rolls on the drawer front or the currency tray.
- Do not clean roller bearings or slides with any water or substance cleaners; use a lint-free fabric to wipe old grease and/or debris.

For more information on the Heritage 15” Cash Drawer visit www.mmfpos.com or for FREE Technical Support call 1-800-769-1954.

Heritage 15” Electronic Quick Inst. Sheet
Last Rev.7-18-11
P/N:531-7304-00