


# VAL-u Line<sup>®</sup> Compact Cash Drawer Setup Sheet

P/N: MMFVAL1004

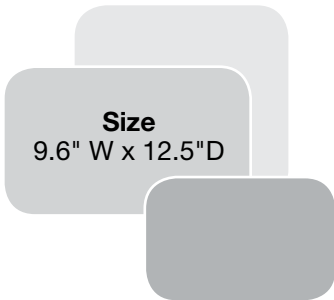

<p><b>Cash Drawer Placement</b></p>	<ul style="list-style-type: none"> <li>• Place cash drawer on a secure and level surface that is no smaller than the cash drawer</li> <li>• Location should be temperature-controlled at 20°F to 100°F (-7°C to 37°C)</li> <li>• Remove packaging tape and guards from cash drawer and place in position</li> </ul>
<p><b>3-Position Lock Functionality</b></p>	<ul style="list-style-type: none"> <li>• 12 o'clock position – Electronically ON</li> <li>• 3 o'clock position – Manually Open</li> <li>• 9 o'clock position – Locked Closed or Locked Open</li> </ul> <p><b>NOTE:</b> To avoid losing, damaging or breaking the key during transactions, place key in the 12 o'clock position and remove key</p>
<p><b>Printer Connection</b></p>	<ul style="list-style-type: none"> <li>• Connect the integrated RJ-12 printer cable to the receipt printer</li> <li>• Follow the set up instructions for your specific printer manufacturer to properly set the open codes for the cash drawer</li> </ul>
<p><b>Preventive Maintenance</b></p>	<ul style="list-style-type: none"> <li>• Lubricate the slides and latch mechanism periodically (inspection and lubrication will vary based on operating conditions)</li> <li>• Remove any debris from slides, if necessary</li> </ul>
<p><b>Troubleshooting</b></p>	<p>Cash Drawer does not open electronically</p> <ul style="list-style-type: none"> <li>• Verify the RJ-12 cable is connected to the printer</li> <li>• Consult the manual for your specific printer for proper open codes</li> <li>• Verify correct lock position (to open electronically the lock should be in the 12 o'clock position)</li> </ul> <p>Cash Drawer does not open manually or electronically</p> <ul style="list-style-type: none"> <li>• Make sure all packaging tape is removed from the cash tray</li> <li>• Make sure foreign objects are not obstructing the currency till from opening</li> </ul>
<p><b>Warning/Safety Instructions</b></p>	<ul style="list-style-type: none"> <li>• Avoid breaking coin rolls on the drawer front or the currency tray</li> <li>• Do not clean roller bearings of slides with water or substance cleaners</li> <li>• Use a lint-free cloth to wipe old grease and/or debris</li> </ul>